


Instructions of Making Simple Top-mount Granite Countertop

1. Making sink cut-out


A. Prepare two pieces of slabs.



B. Cut two granite strips according to the sink size.

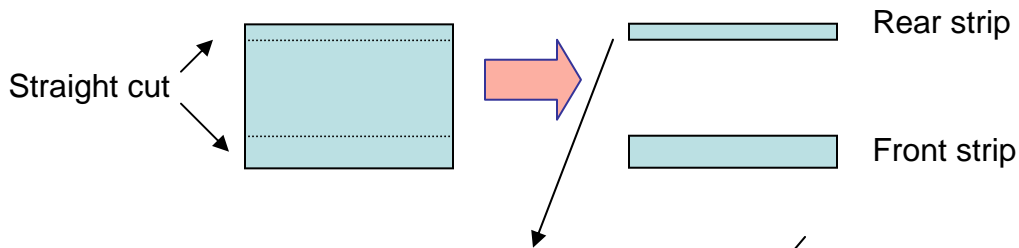


C. Install drop-in or top-mount sink.

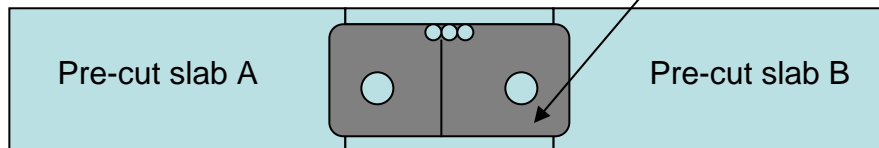

Most of seam lines are under the sink. Visible seam lines are very minimal.

2. Corner joint

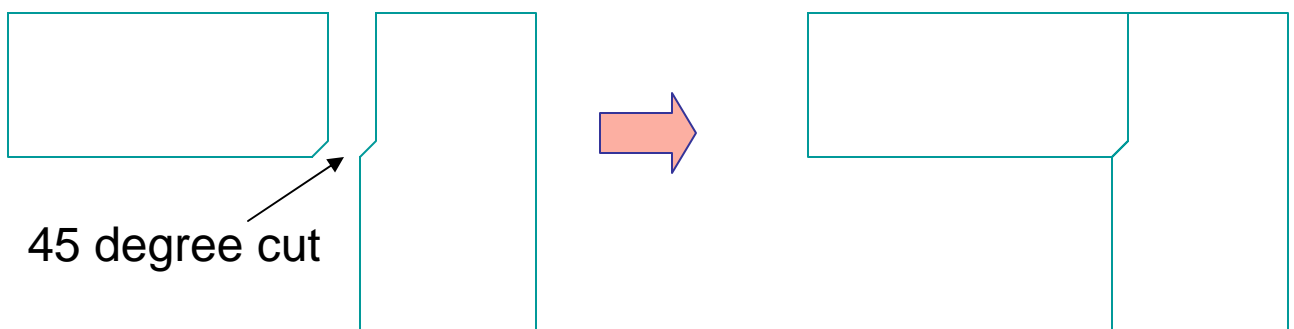

The installation typical takes two men 3 to 4 hours work. See next page for a real project

A Top Mount Sink Example

